Connecting a AV device

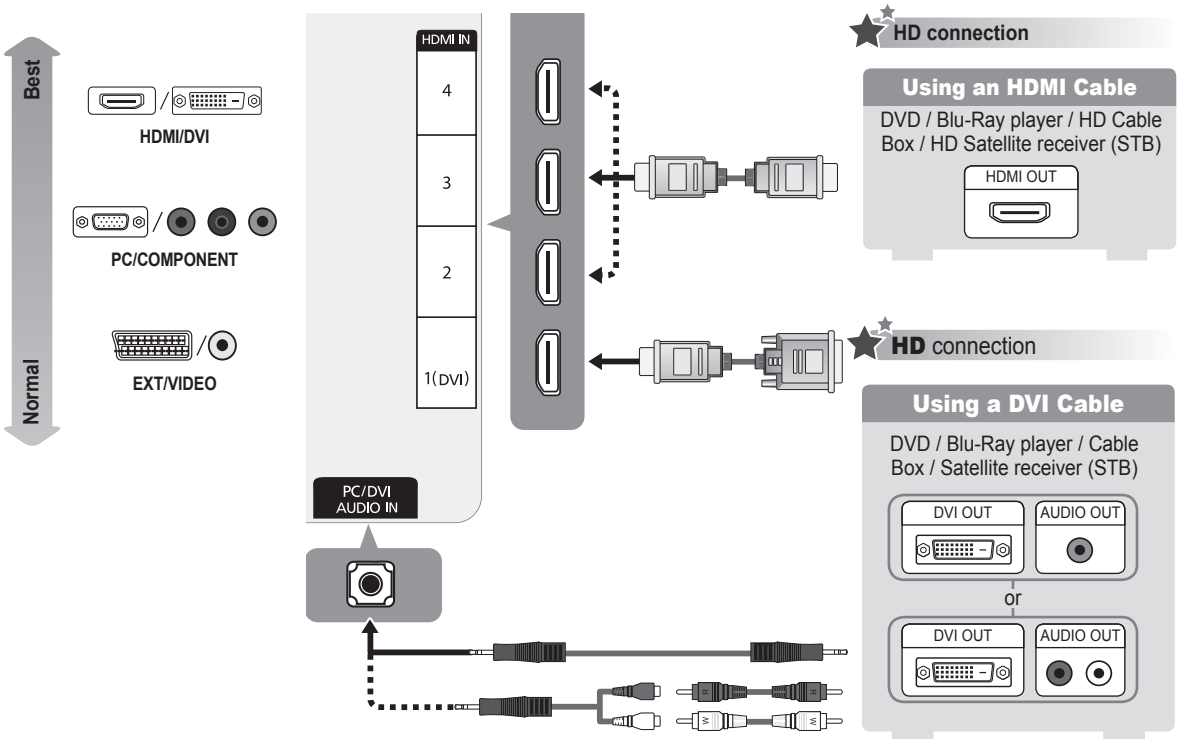

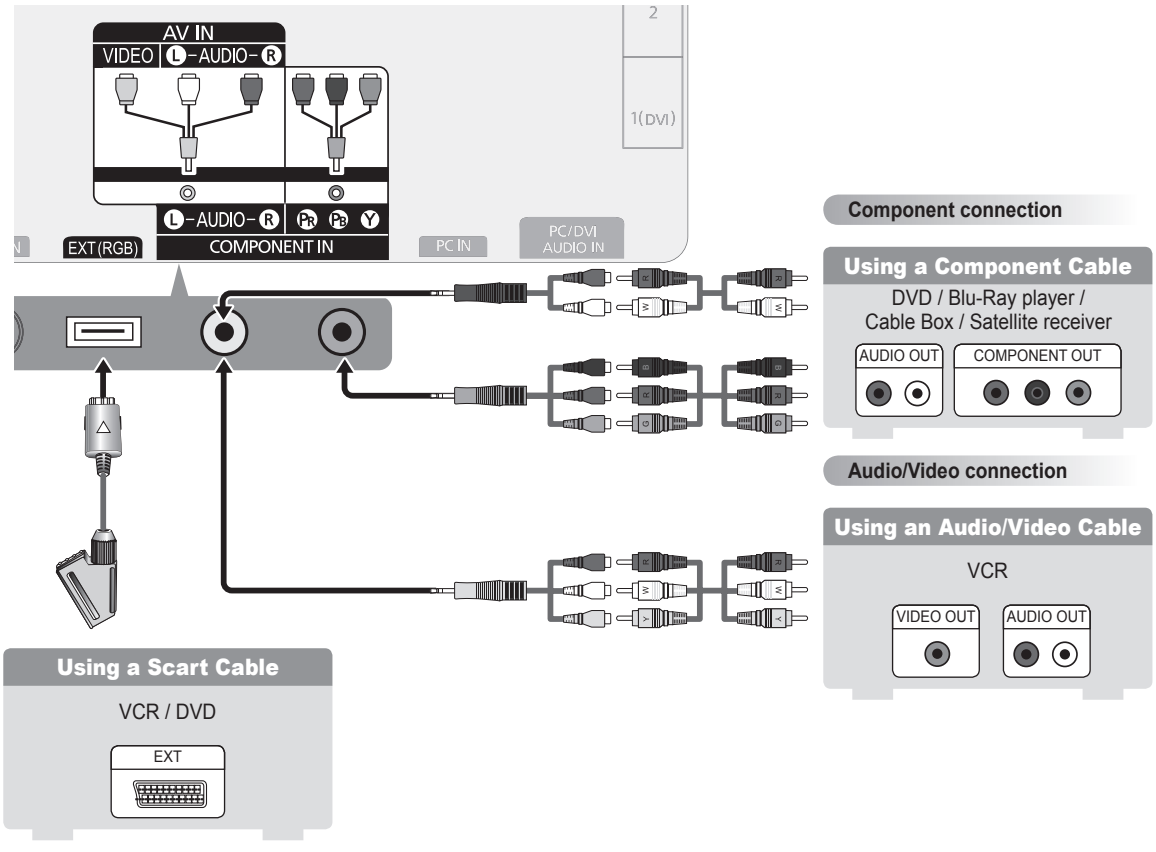

SERIES 7

LED TV
QUICK SETUP GUIDE

The Supplied Accessoris

Remote Control &
Batteries (AAA x 2)

Mini Remote Control
& Lithium battery (3V)

Program CD

Cleaning Cloth



Holder-Wire (3ea)



Cover-Bottom

(M4 X L10)

Stand Screw X 5

(M4 X L12)

Stand Screw X 4
(Applicable to 32inch model
only)

Holder-Ring (4ea)

Holder-Wire Cable
(Depending on the model)

Holder-Wire stand

AV Cable

Component Cable

SCART Cable

User Manual

Installing Batteries in the Remote Control

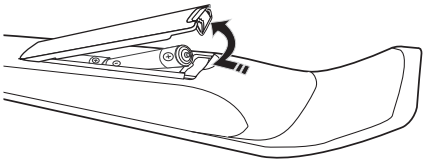

BN68-02287S-00

Installing the Stand

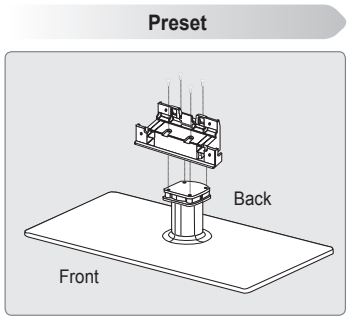

Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws. Applicable to models (UE32B7000, UE32B7020) only.

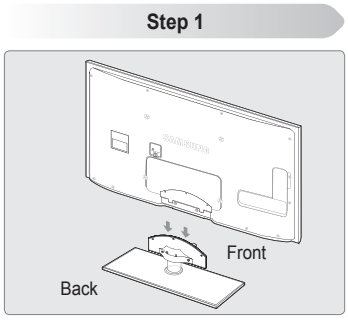

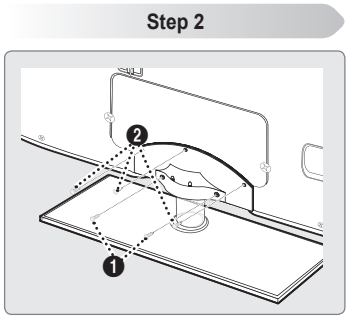

Step 1. Attach your LED TV to the stand.

- Two or more people should carry the TV.
- Make sure to distinguish between the front and back of the stand when assembling them.
- To make sure the TV is installed on the stand at a proper level, do not apply excess downward pressure to the upper left of right sides of the TV.

Step 2. Fasten two screws at position ❶ and then fasten three screws at position ❷.

- Stand the product up and fasten the screws. If you fasten the screws with the LED TV placed down, it may lean to one side.

Using the remote control buttons

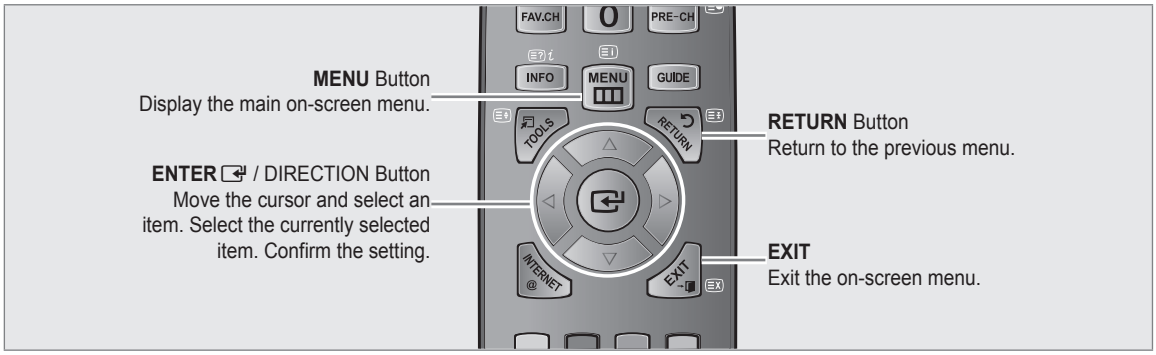

Plug & Play

When the TV is initially powered on, basic settings proceed automatically and subsequently.
If you want to reset this feature, press the **MENU** button to display menu.
You can set the Plug & Play by selecting 'Setup → Plug & Play'.

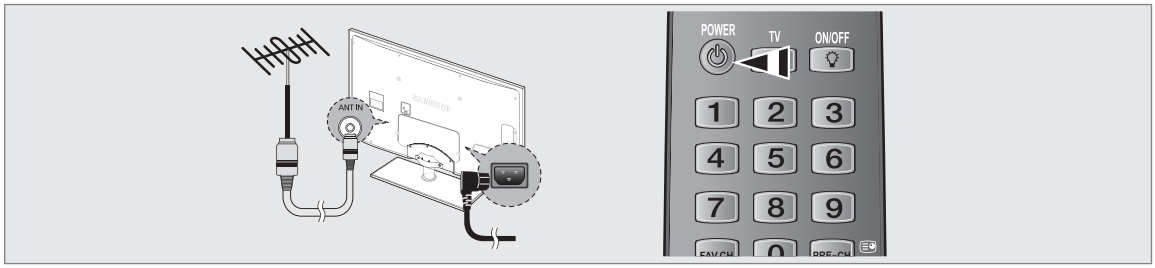

On the screen, you can set as follows.
The each step may vary depending on the Antenna source.

Step 1

Step 2

Step 3

Step 4

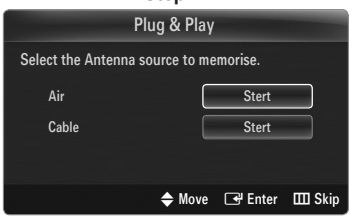

Step 5

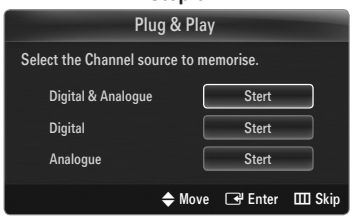

Step 6

Step 7

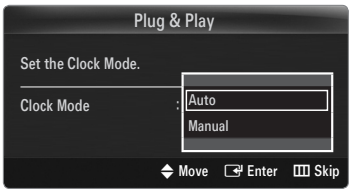

Step 8

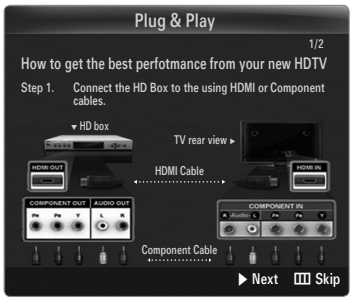

Step 9